



stop silent

light Installation of the adapter

Stop Silent Light backwater flaps have a clamping range of approximately 8% of the nominal diameter. For installation situations in which the inner diameter of the tube is not within the clamping range of the Stop Silent Light, we offer adapter parts. Thus, we cover a range of tube inner diameter from 75mm to more than 340mm with our standard products.

→ Unique adapter

- The adapter is inserted into the tube by being bent and pressed against the tube wall. Care is required to ensure that the adapter is not bent at the seal.



→ Multi-layer adapters:

- Again, the adapter is inserted into the tube by being bent and pressed against the tube wall. Care must be taken not to bend the adapter at the seal. The second adapter will be applied exactly the same way inside the first adapter.

→ Inserting the Stop Silent Light valve

- The valve must be inserted in accordance with the installation instructions. It must then be ensured that the edge of the adapter is completely covered by the sealing lip of the plug (see picture).

